

PURLIN GLIDE FP[®]


FABRIC ATTACHMENT TO EAVE

7
XA-701

SECURING THE PURLIN GLIDE FP FABRIC TO THE EAVE STRUT PROPERLY:

7
XA-702

Screws Must Be
Placed Every
24" To 30"

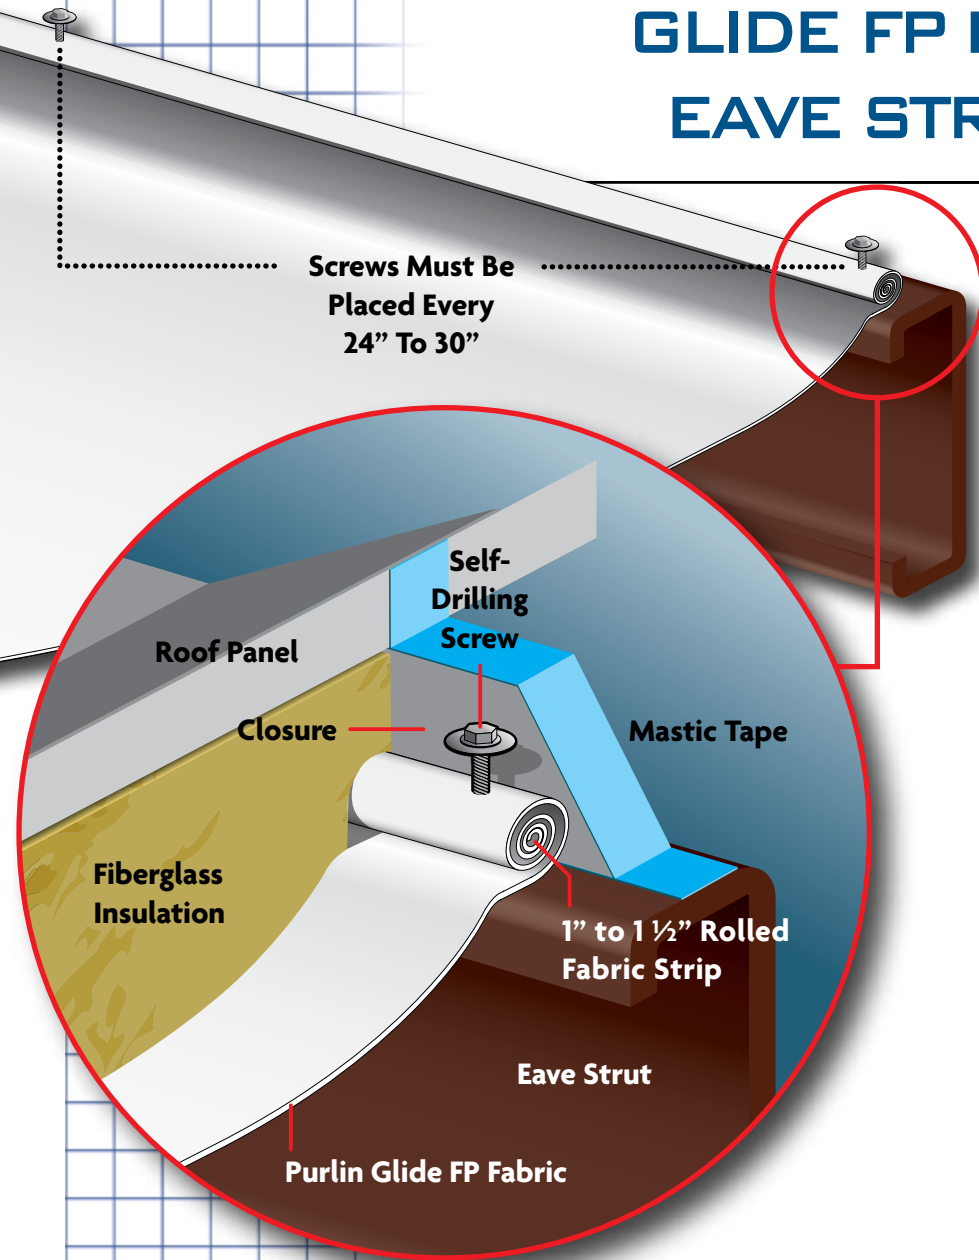

- Roll the overlap of fabric that extends past the eave strut into a strip 1" to 1 ½" wide.
- Secure rolled fabric to the top of the eave strut using a self-drilling screw with washer.
- Fabric must be secured to the top of the eave strut every 24" to 30".
- Insulation blanket should be laid so that it extends onto the eave strut.
- Be sure to follow your metal building manufacturer's recommended eave closure procedure. Do not allow the Purlin Glide FP fabric to interfere with that procedure.



29200 Fountain Parkway · Solon, Ohio 44139
800-231-6200 · www.silvercote.com

GLS170 10M 9/09
Printed in U.S.A.

© 2009 Guardian Building Products Distribution, Inc.
www.guardianbp.com